



- | | |
|--|------------------------------|
| S 1 : Main switch | M 1 : Wash pump motor |
| S 2 : Start switch | M 2 : Timer's motor |
| S 3 : Door's cut off switch | M 3 : Drainage pump motor * |
| PS : Pressure switch | M 4 : Detergent pump motor * |
| R 1 : Boiler's/Booster's heating element | TH : Thermostat |
| R 2 : Tank's heating element | TF : Thermofuse |
| H : Indicator lamp | TS : Timers microswitch |
| Y : Water inlet valve | K : Relay |

* OPTIONAL

ELECTRICAL DIAGRAM
EUROLINE 40 F / AD

220-240 Volt AC 50/60 Hz

Max 2880 W 13 A